




RL-1510 1500\*1000\*600

## 1 : Package

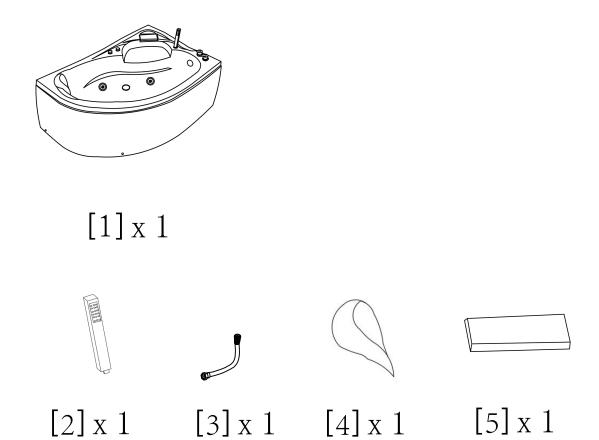


## 2 : Install tools

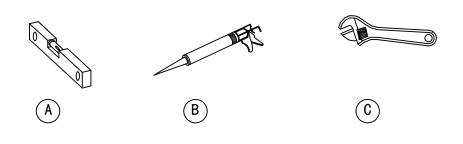


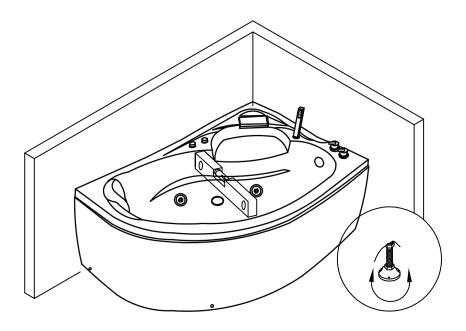

Step 2 : Move the bathtub out

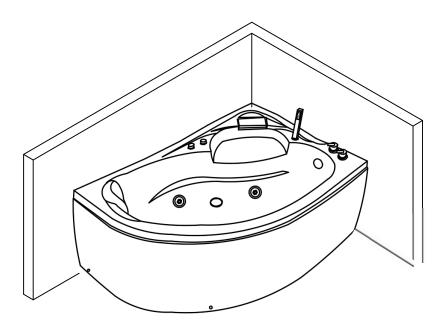

Step 3: as the pics: connect the waterfall and shower (install the waterfall in the bathtub first)

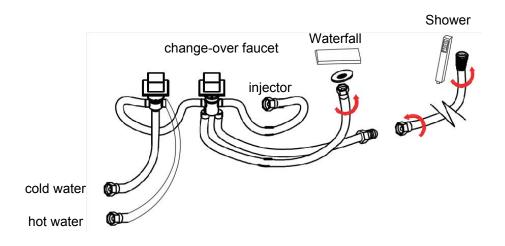

Step 4 : as the pics ,First, Take the down-flow pipe inserted into the sewer ,then connect the inlet pipe (take care the hot and cold water ) and Plug the power cord into

