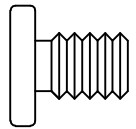
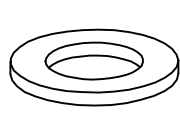
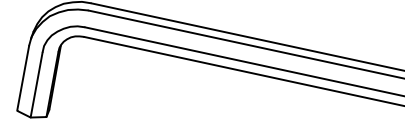
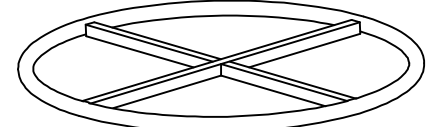
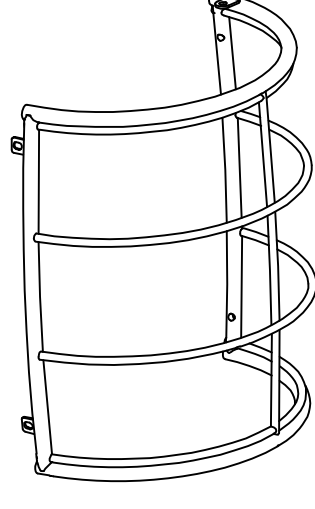
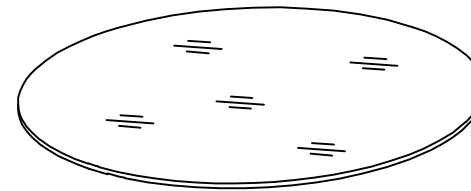
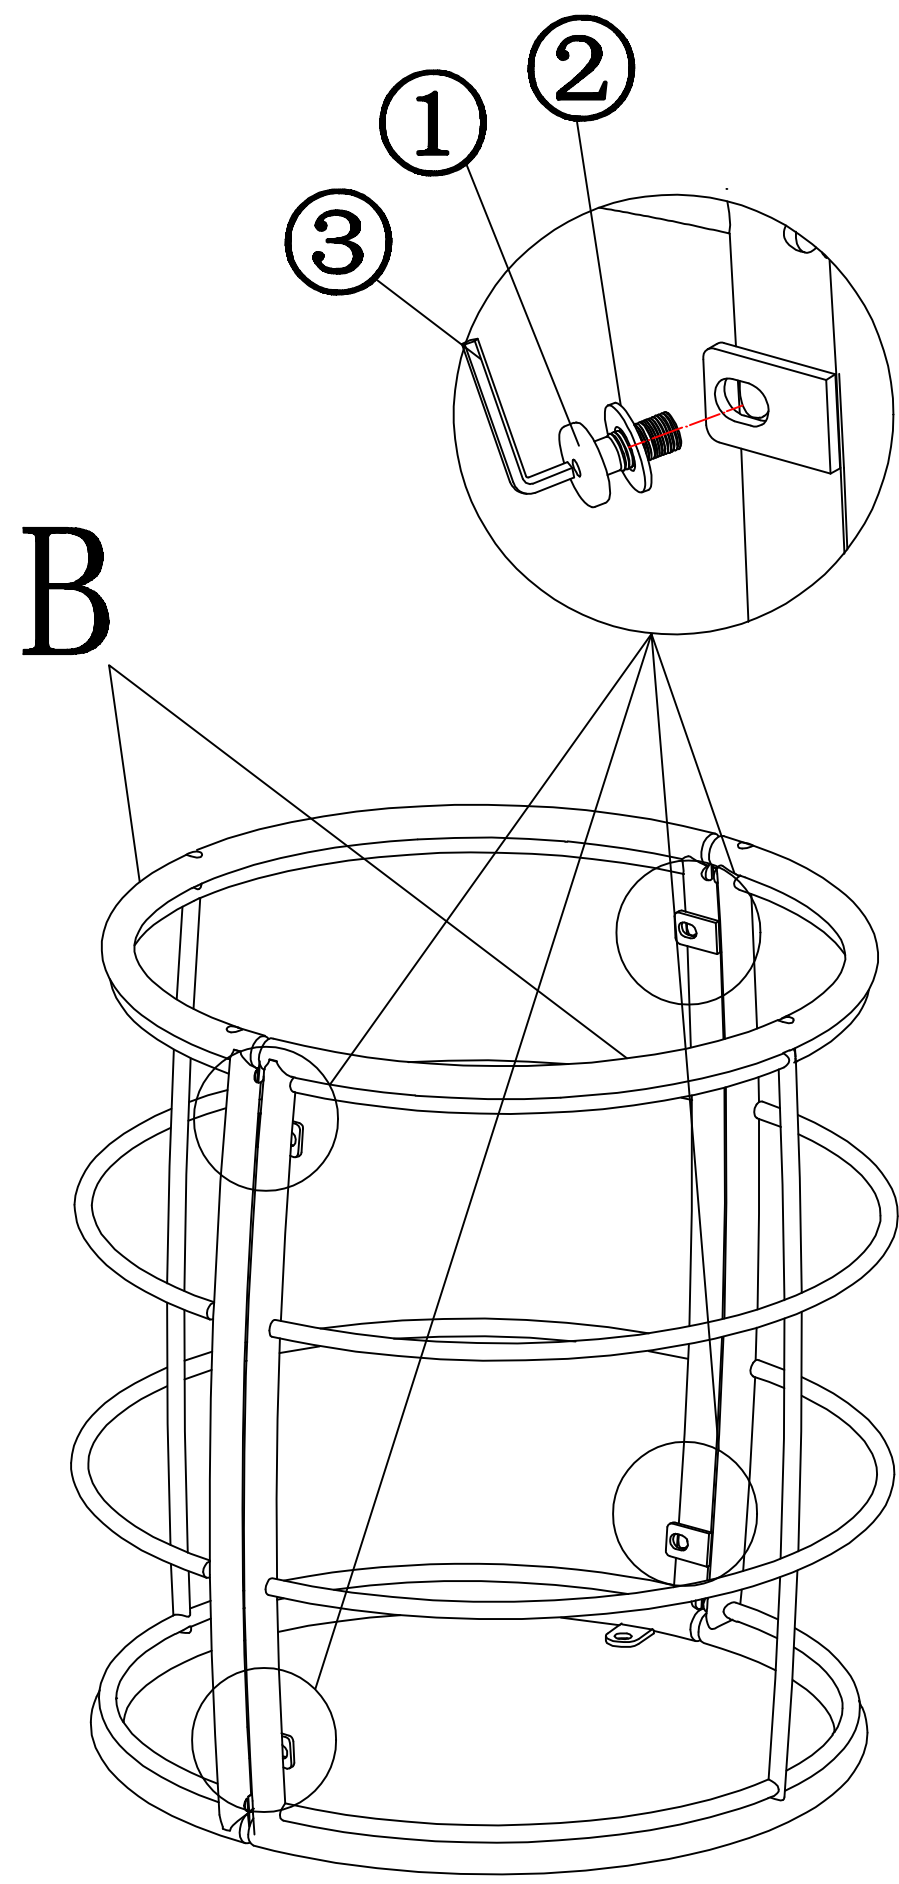



Assembly Instructions

①  Bolt M6*15mm 6PCS	②  Washer 6PCS	③  Allen Key 1 PC
A  1 PC	B  2 PCS	C  1 PC


Step1:








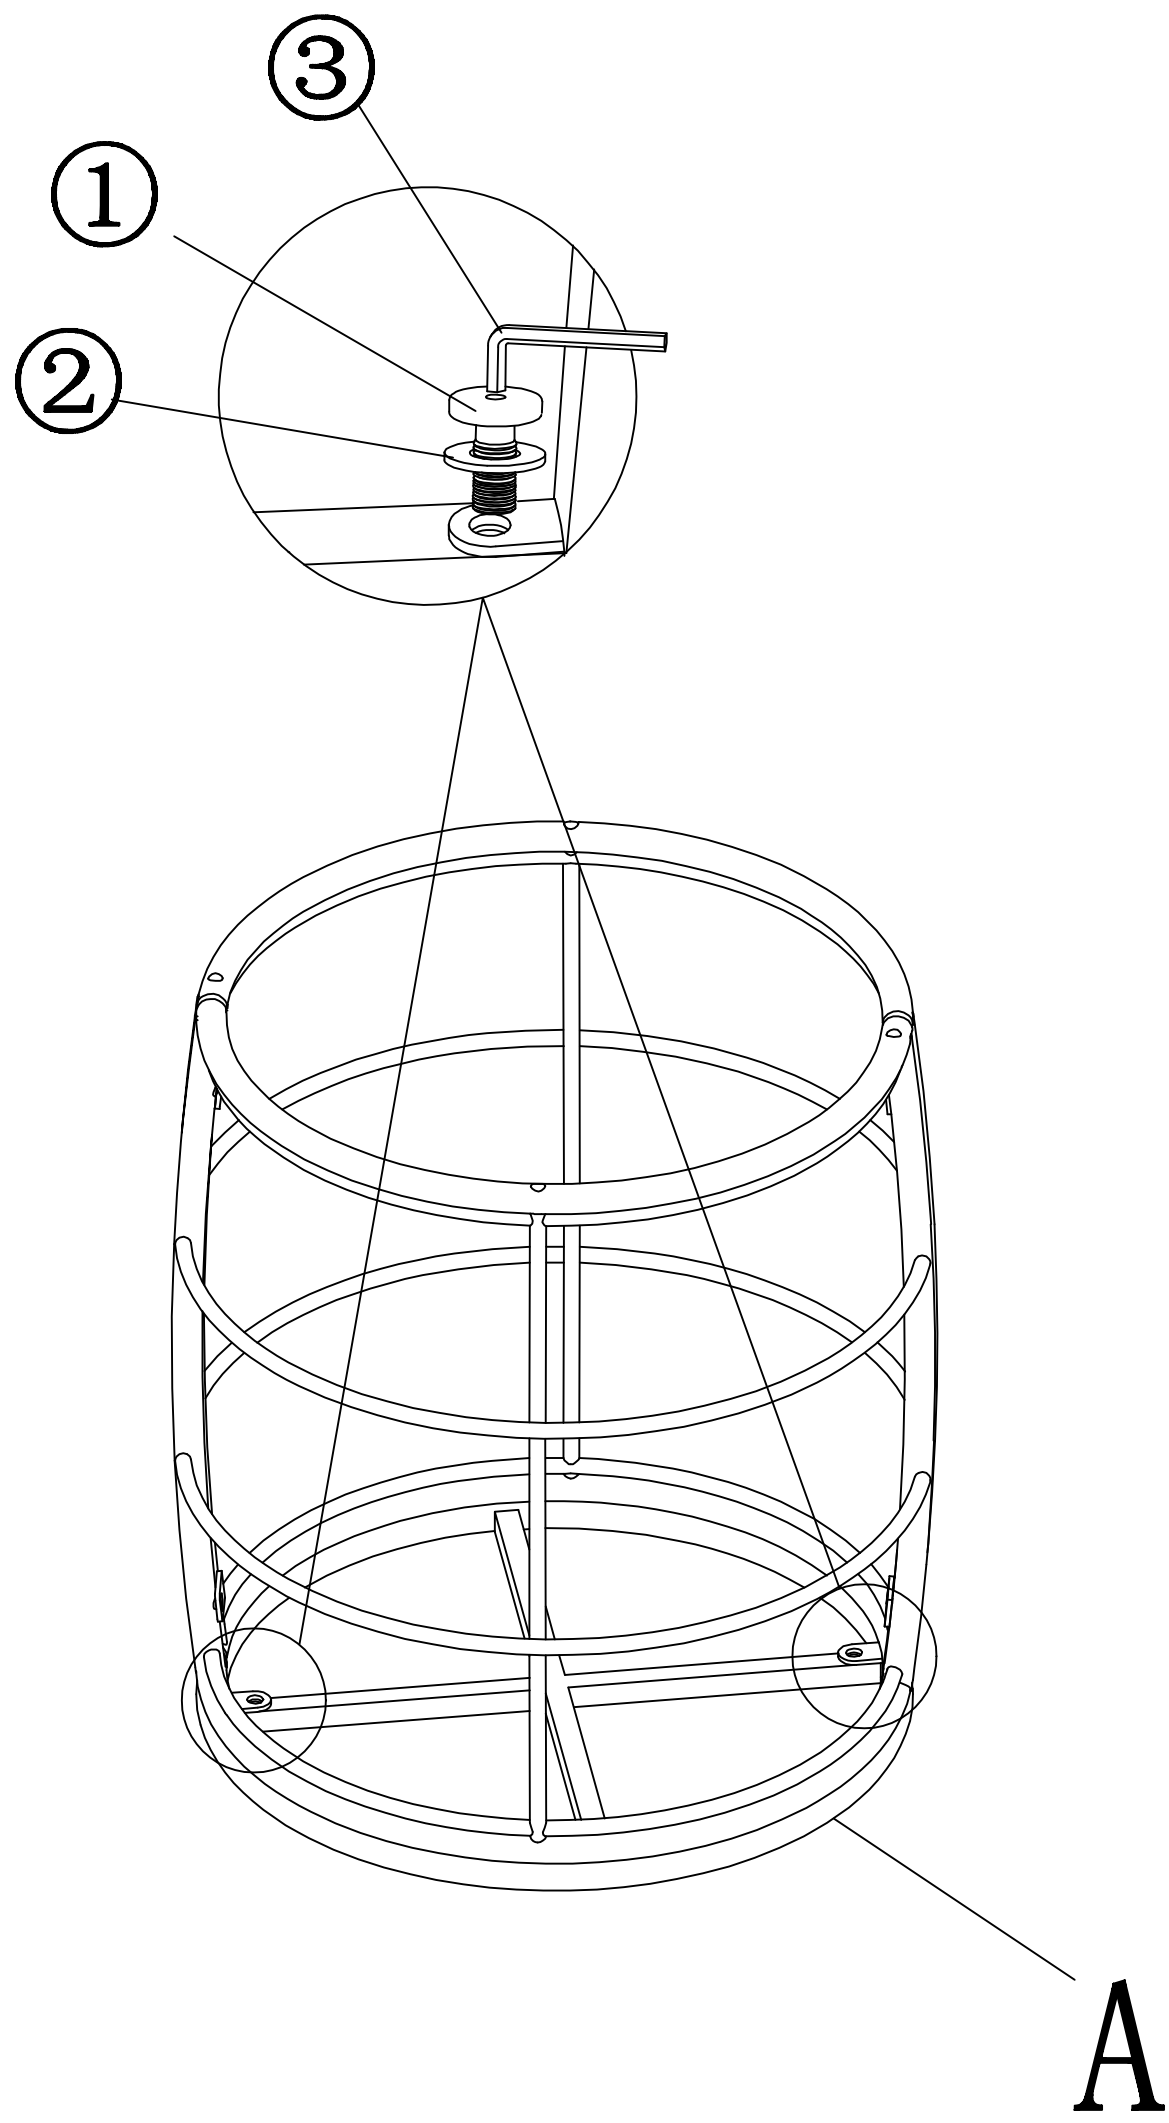
Step2:



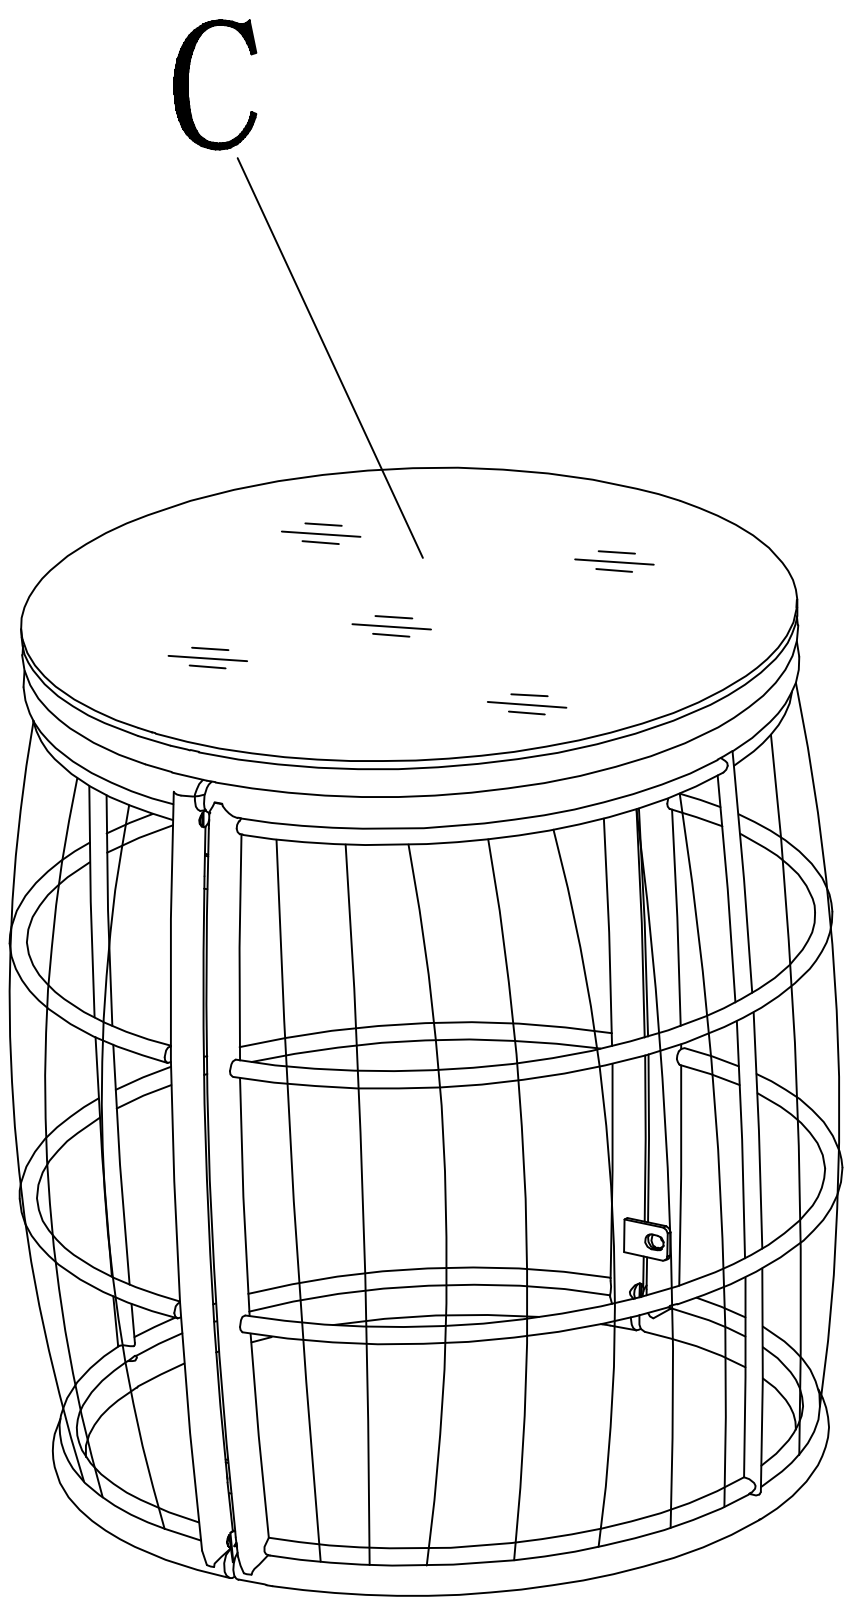
Step3:




Assembly Instructions

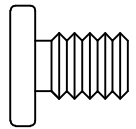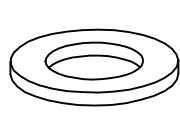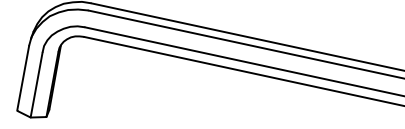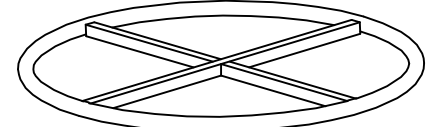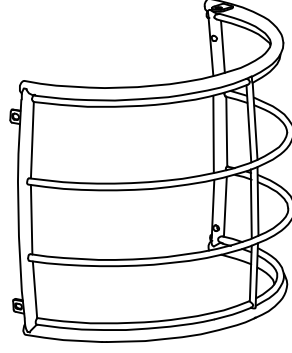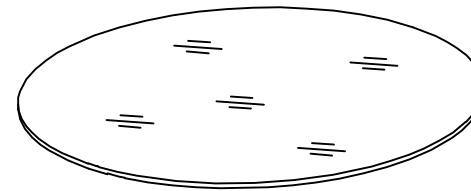①  Bolt M6*15mm 6PCS	②  Washer 6PCS	③  Allen Key 1 PC
A  1 PC	B  2 PCS	C  1 PC

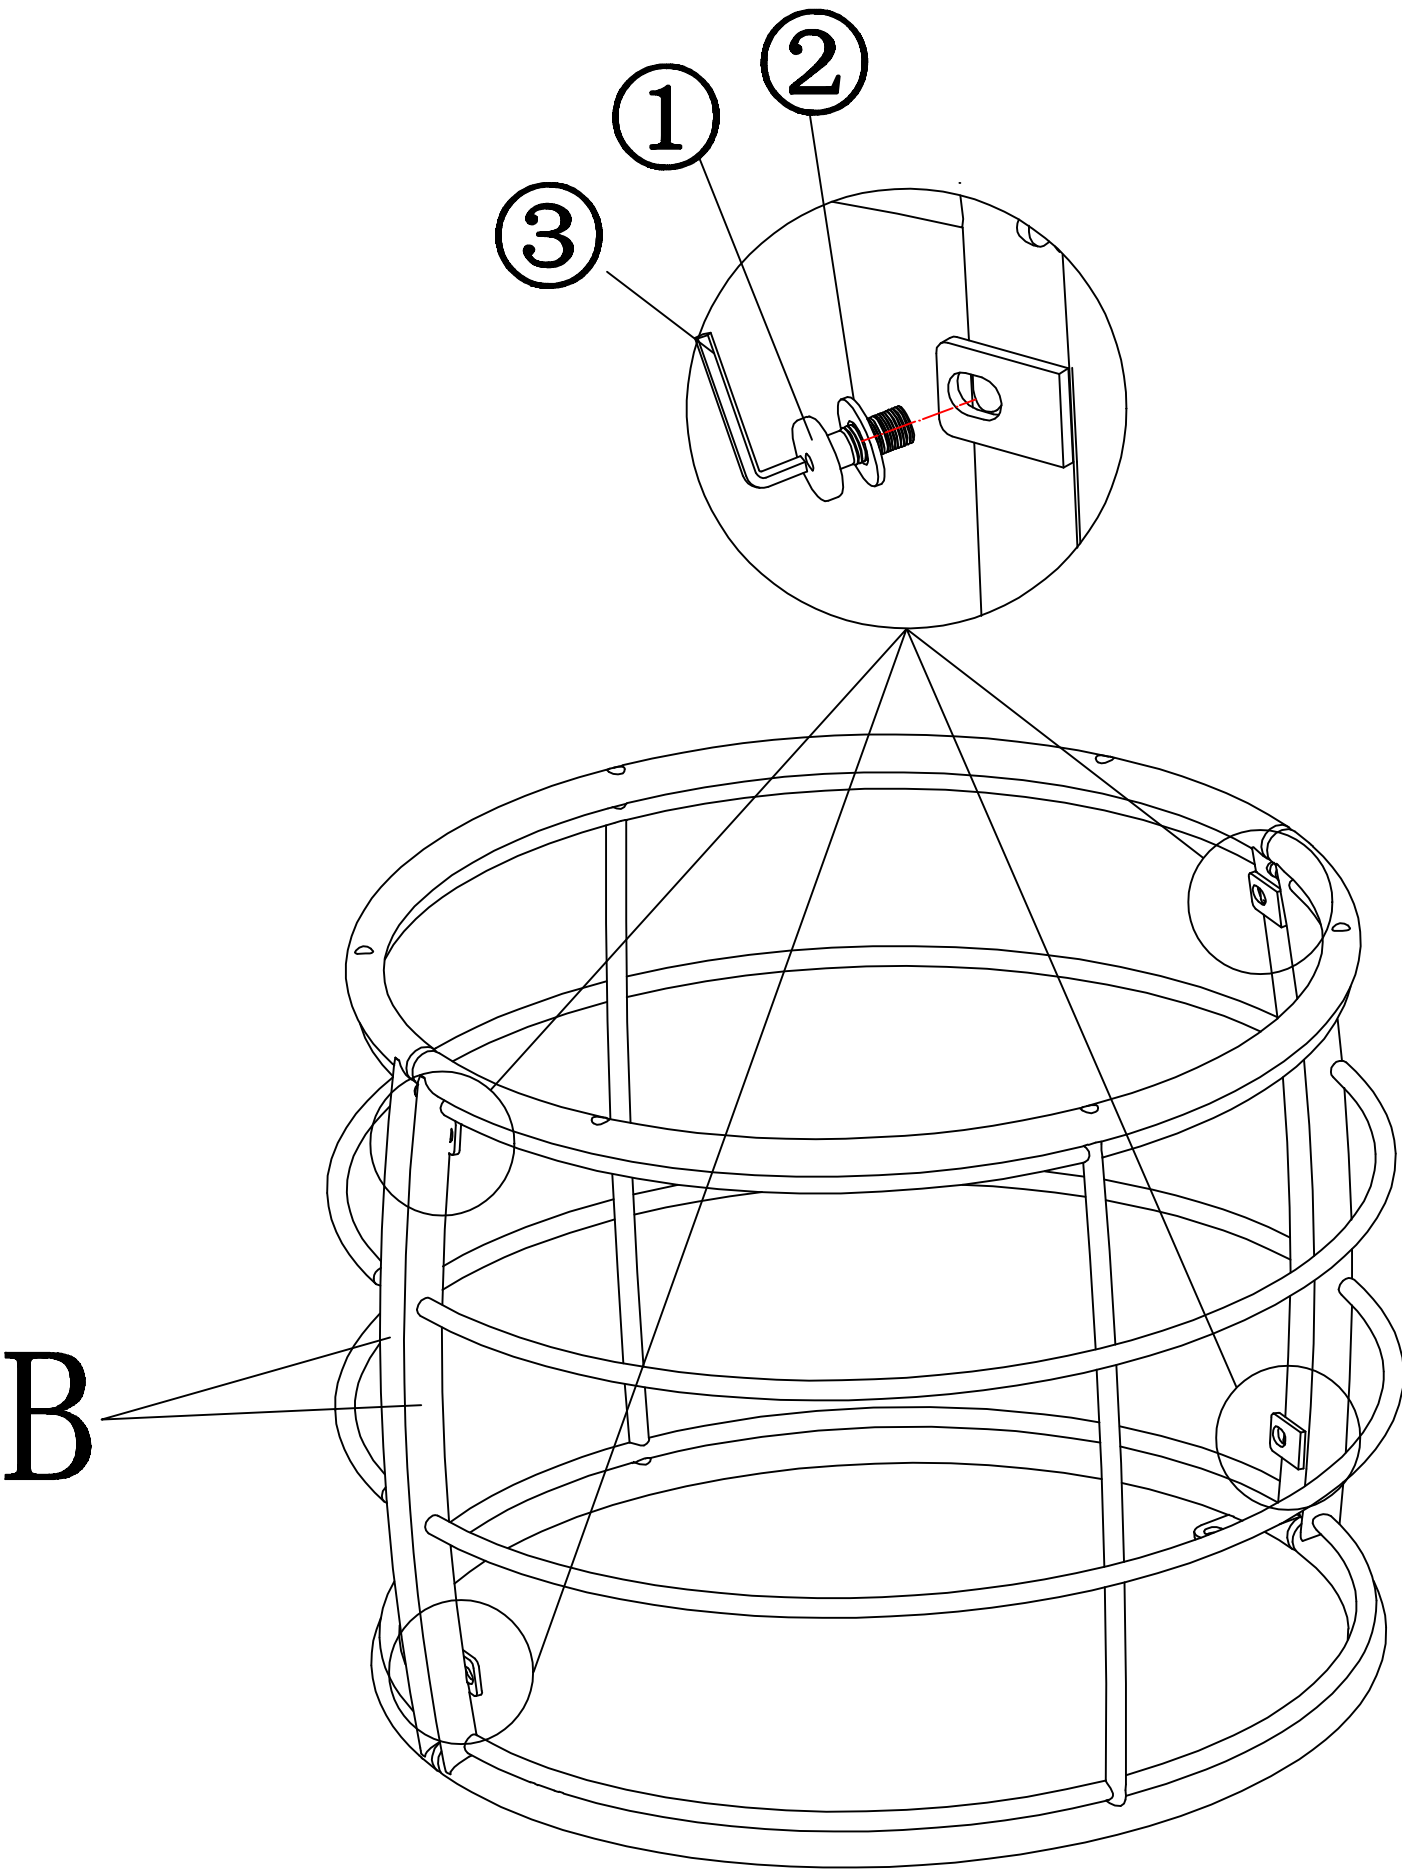
Step1:









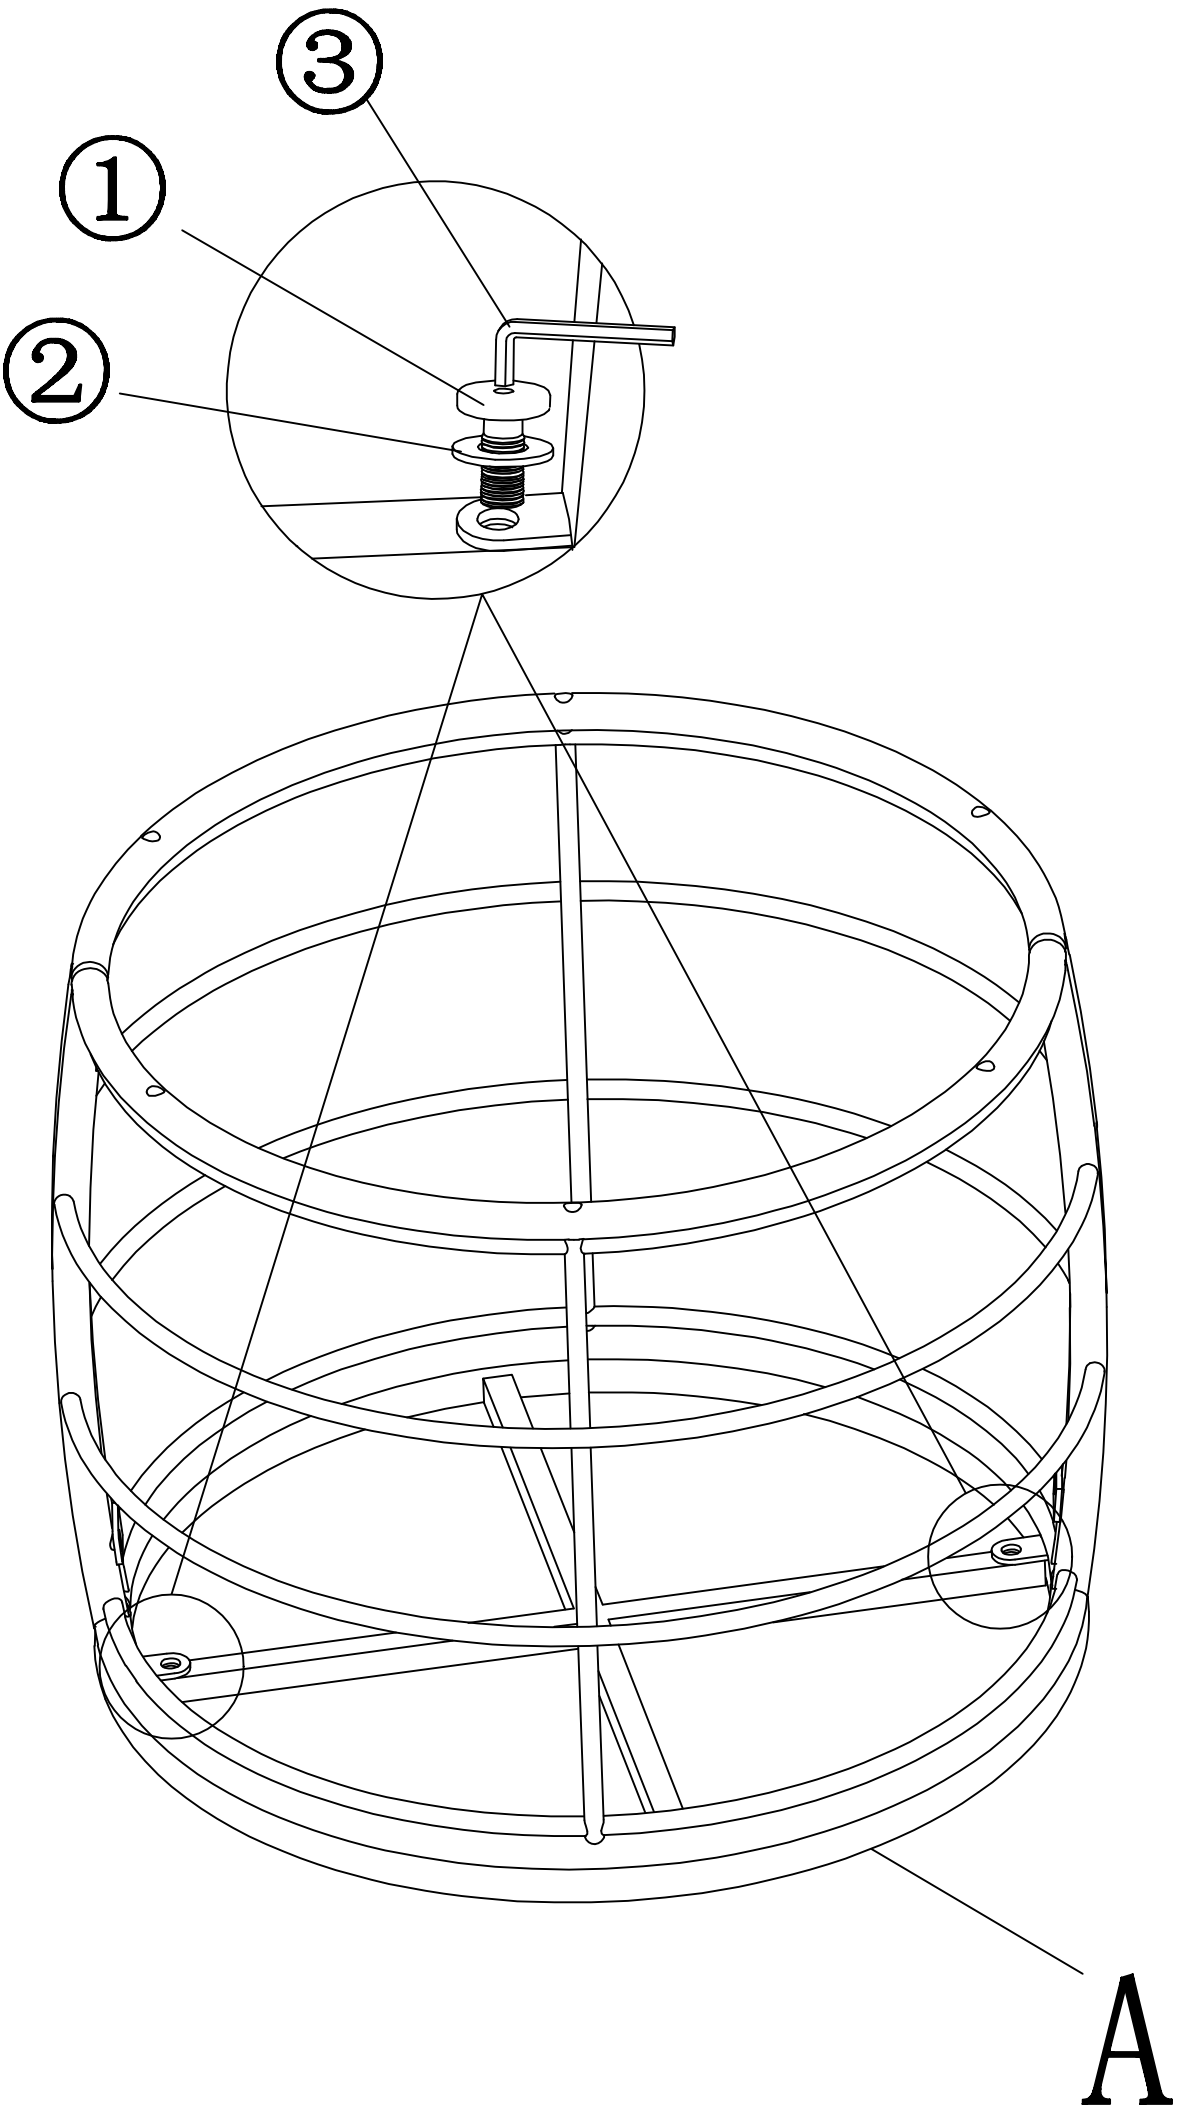
Step2:



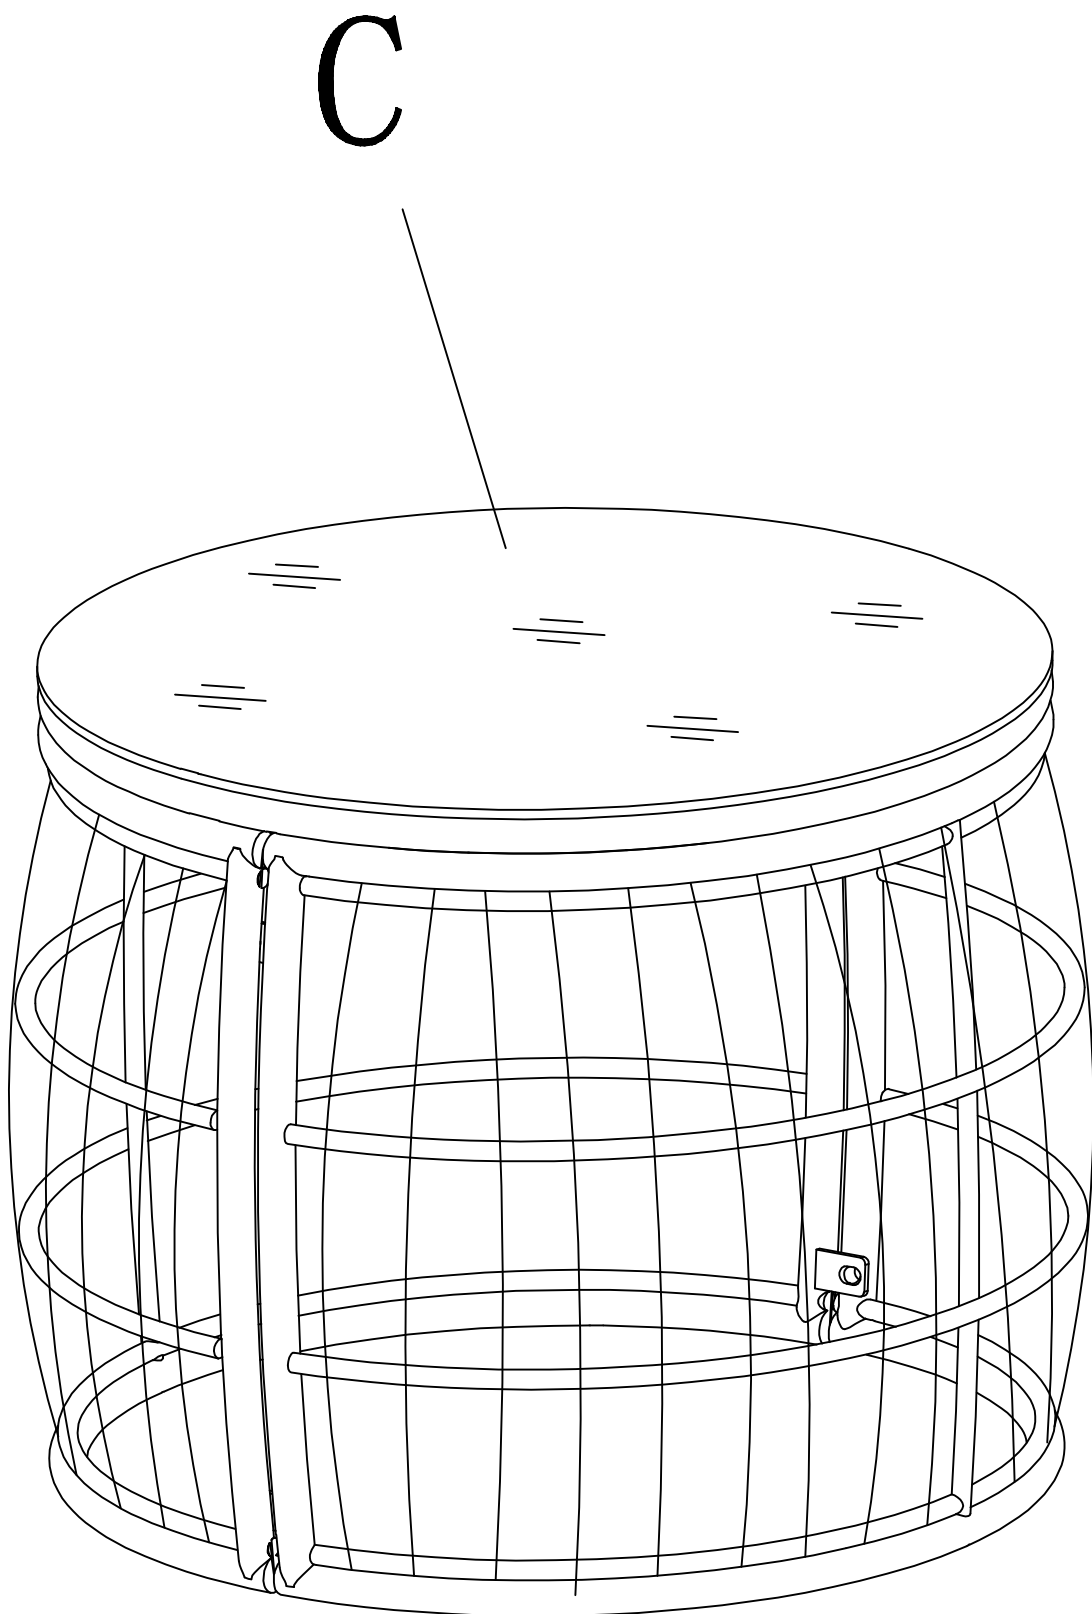
Step3:




Assembly Instructions

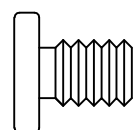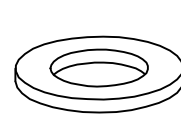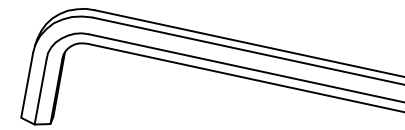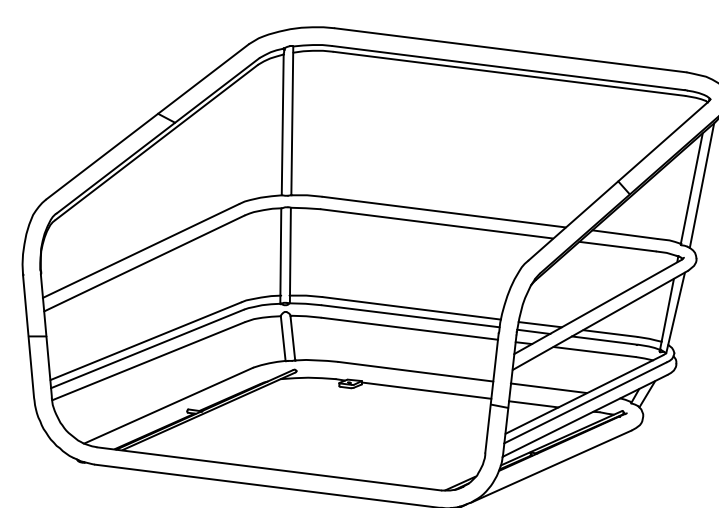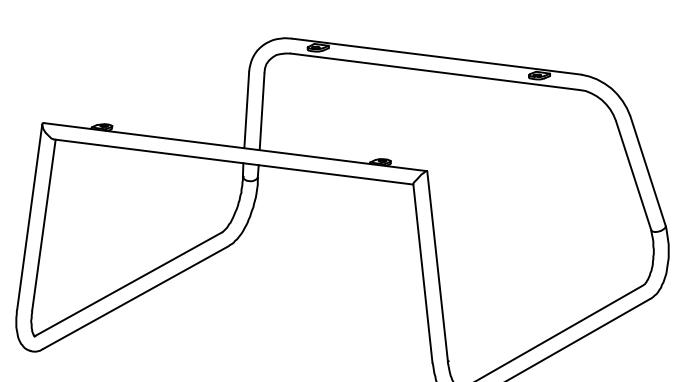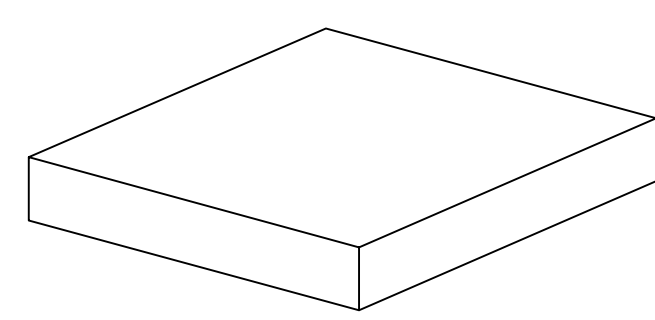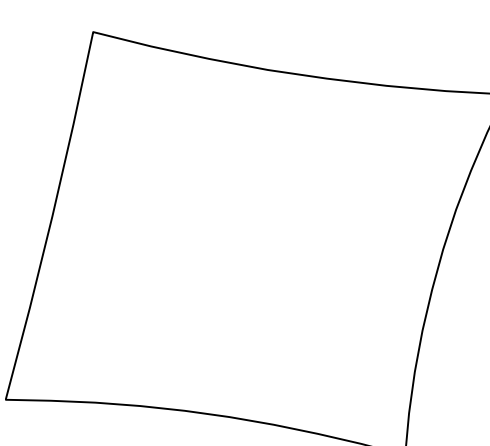①  Bolt M6*15mm 8 PCS	②  Washer 8 PCS	③  Allen Key 1 PC	
A  2 PCS	B  2 PCS	C  2 PCS	D  2 PCS







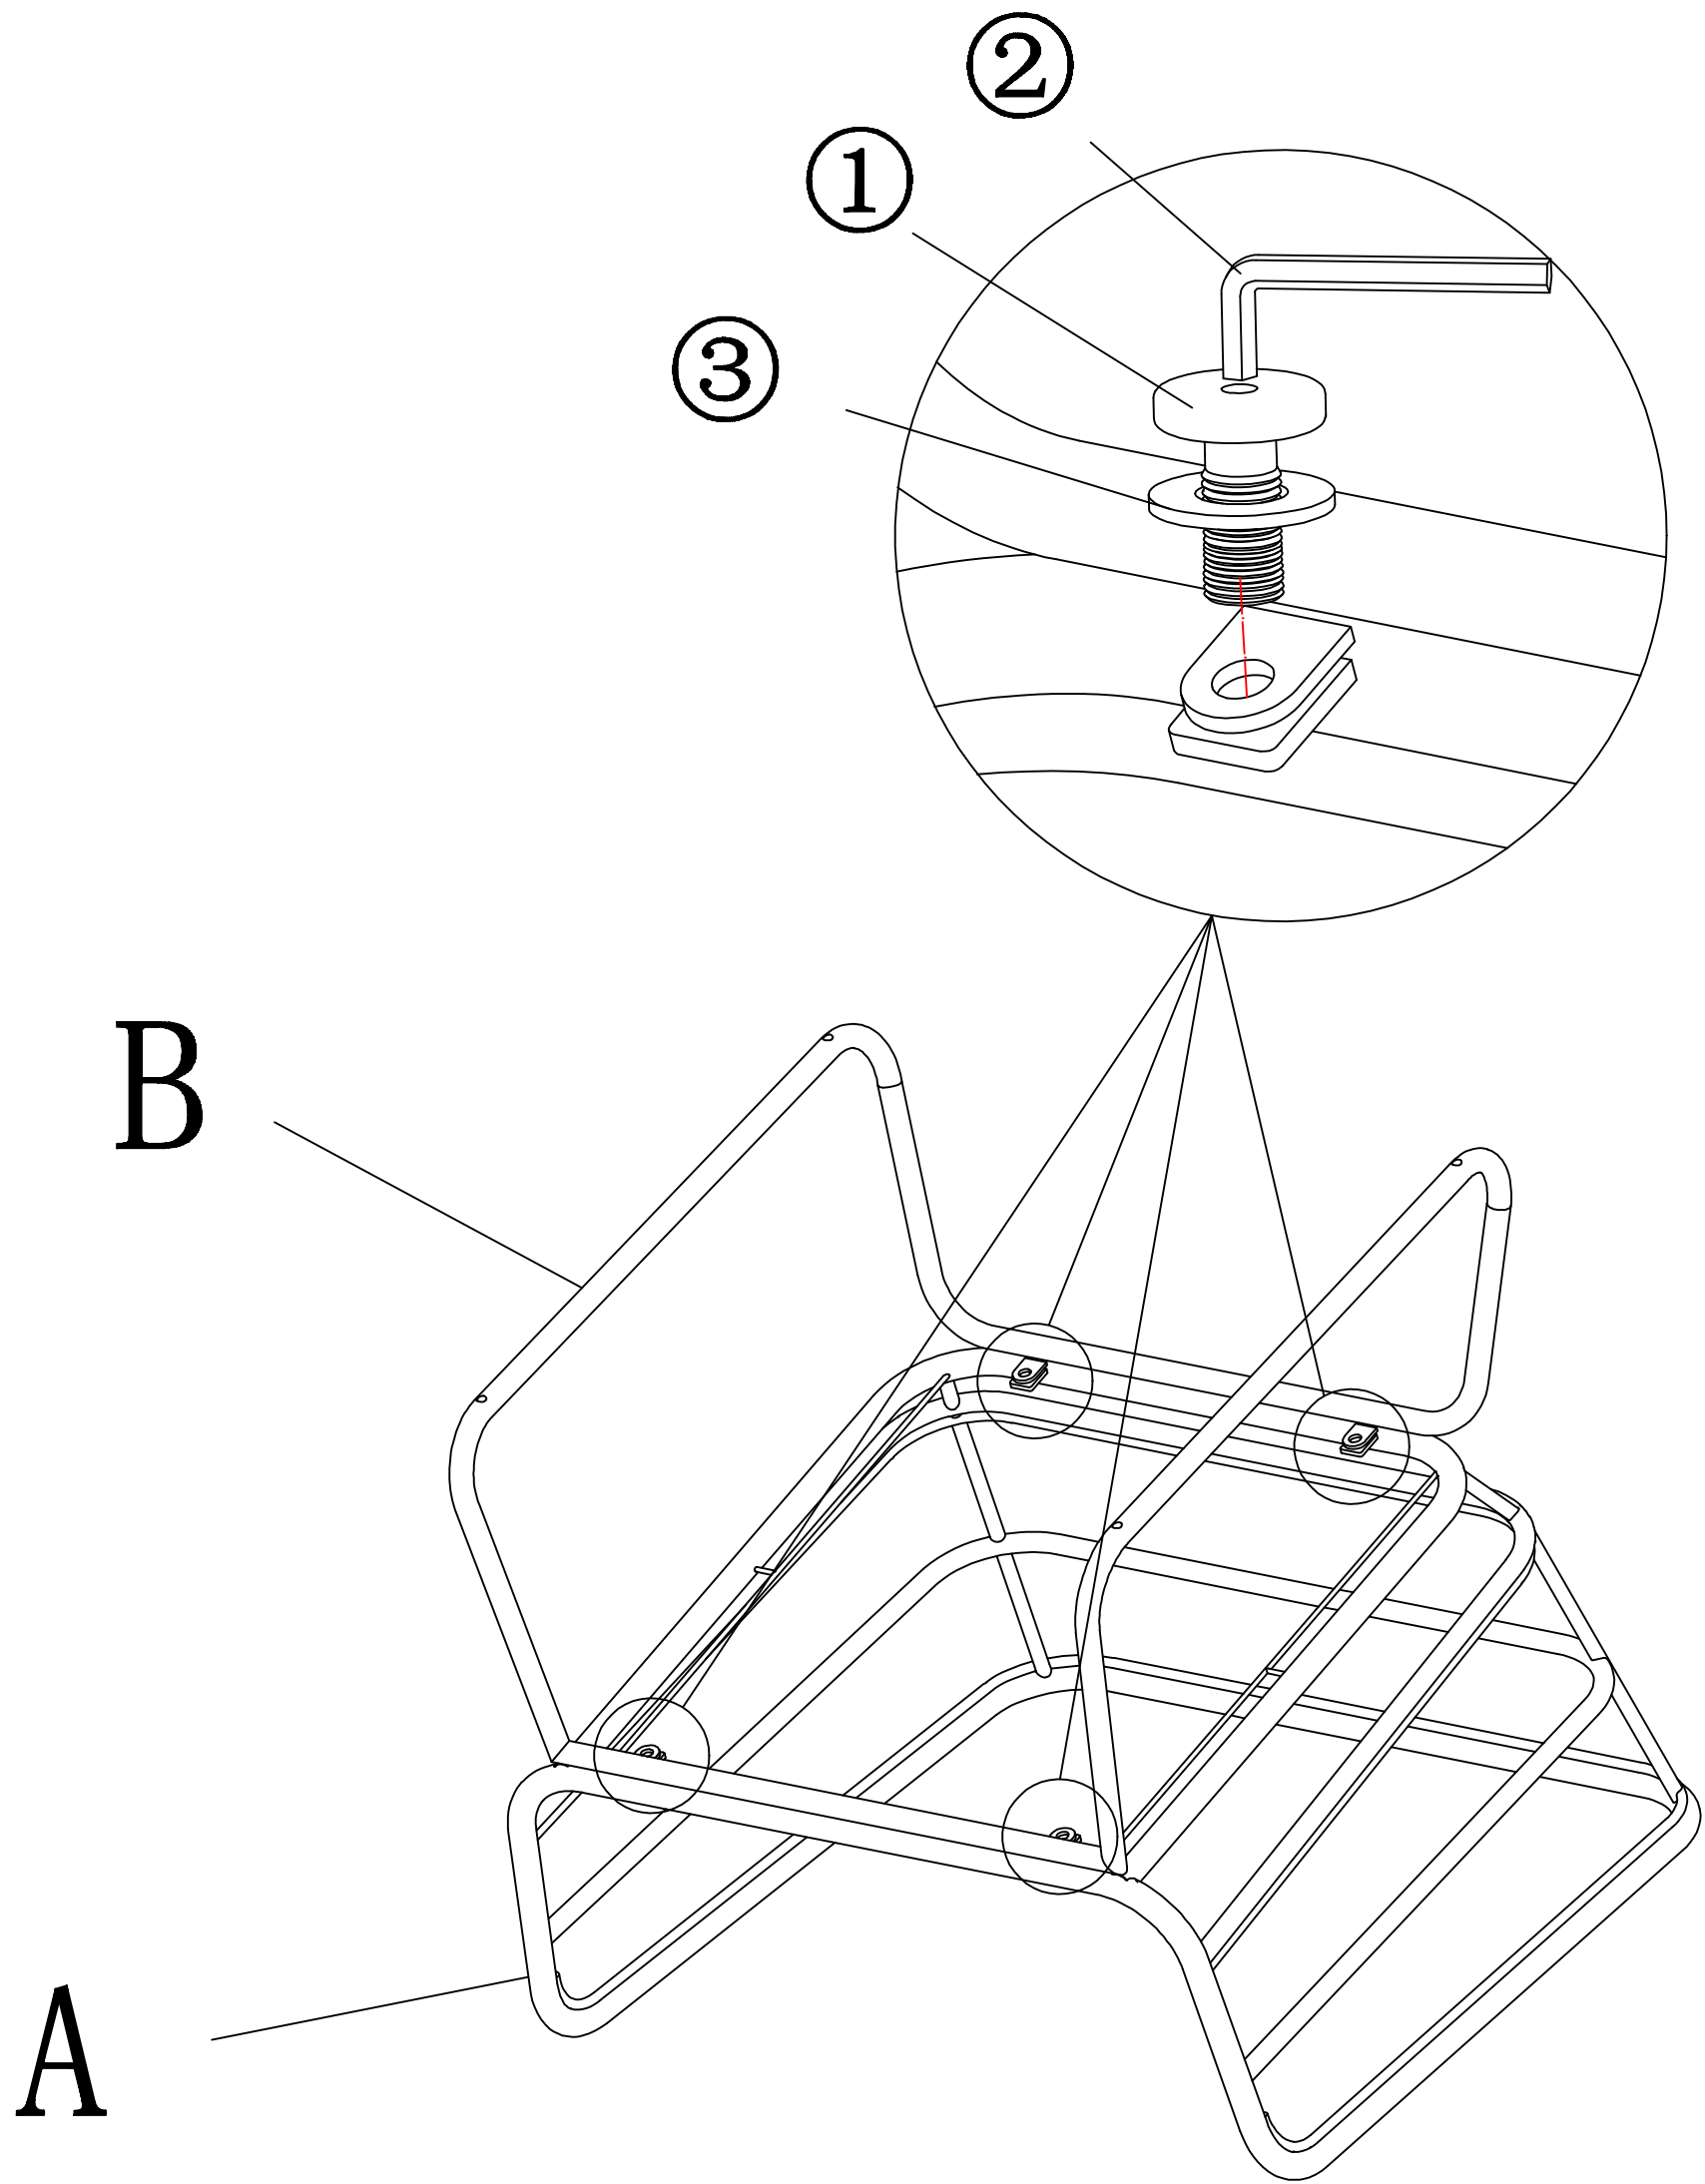
Step1:



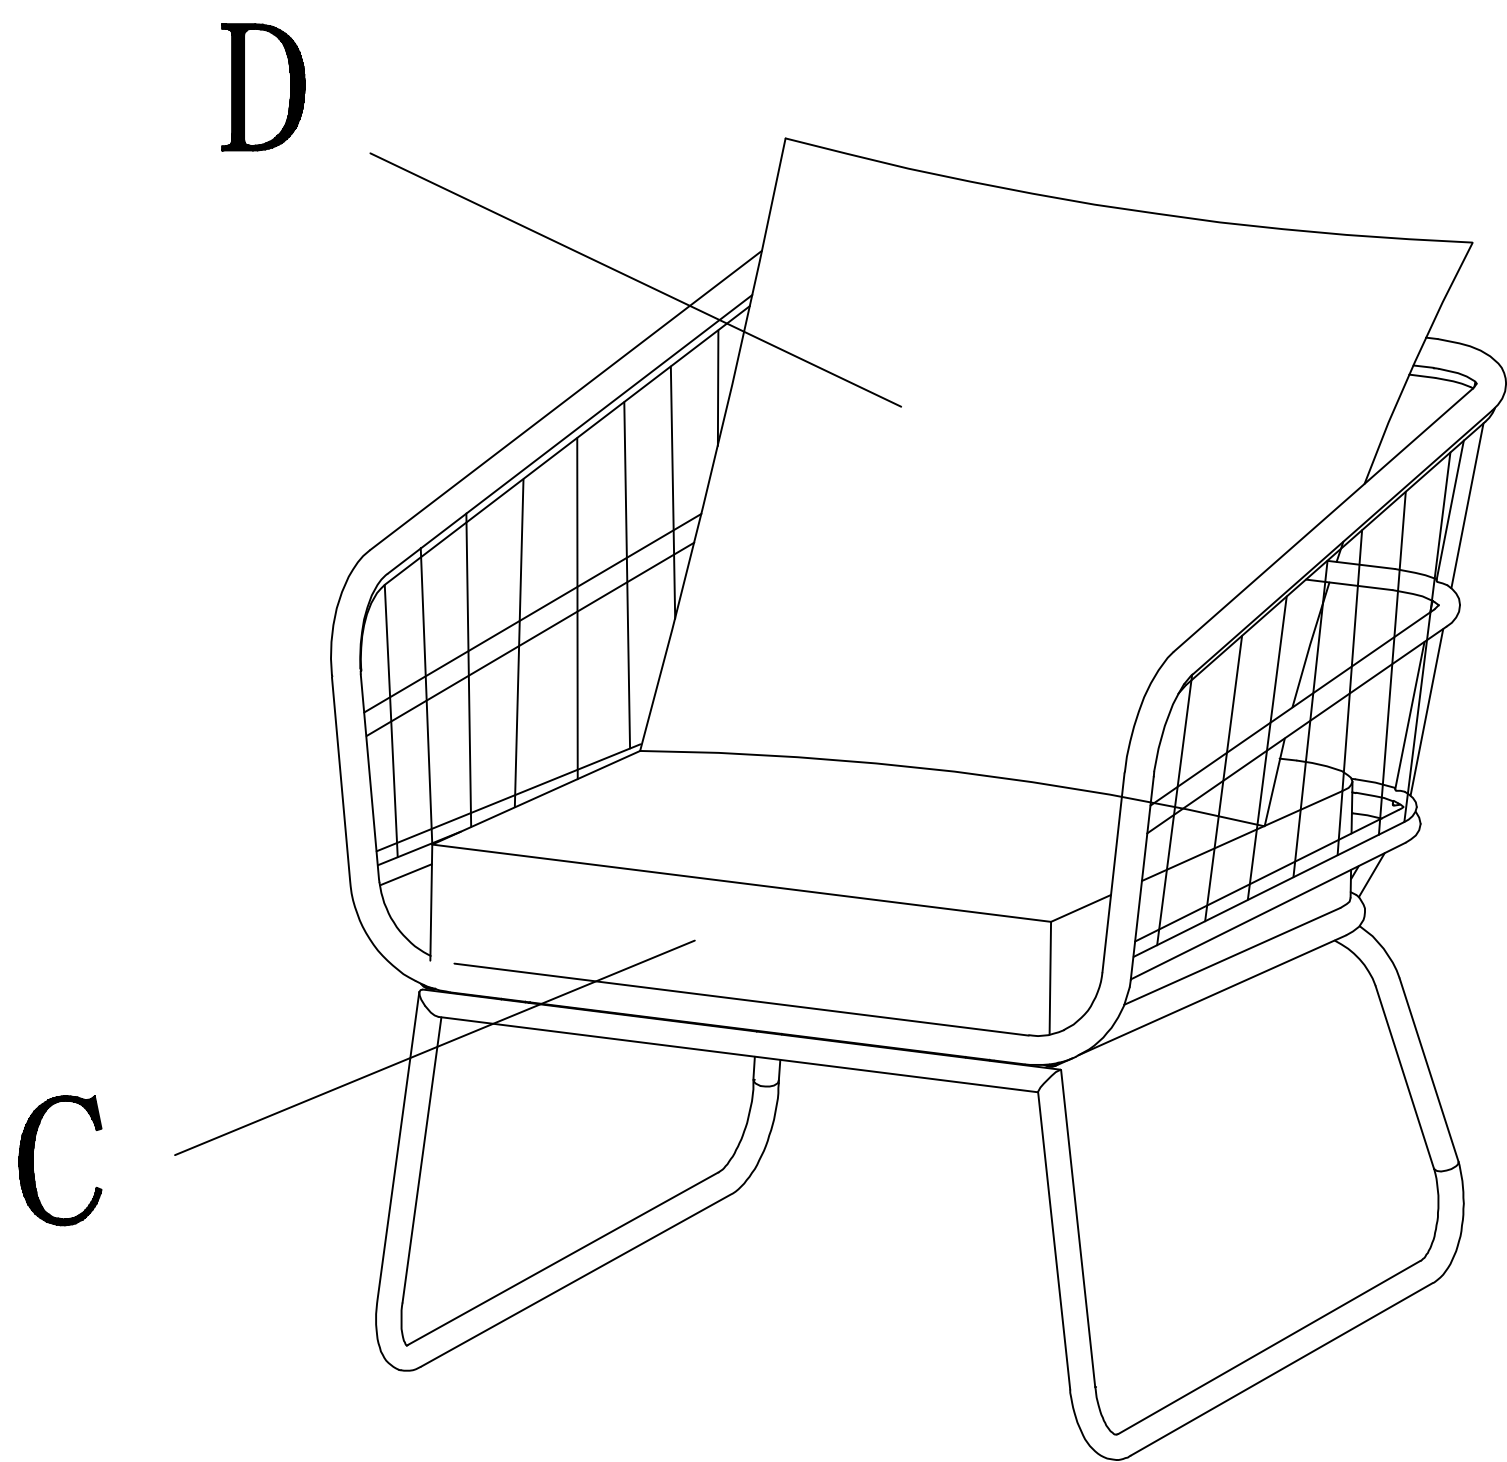
Step2:



Assembly Instructions

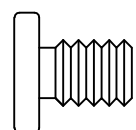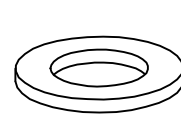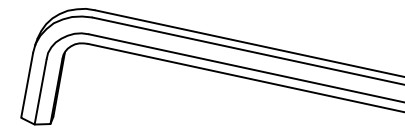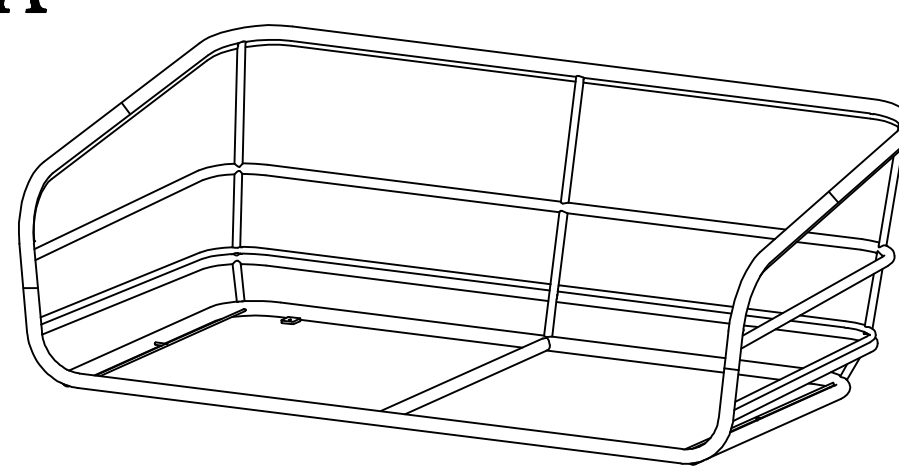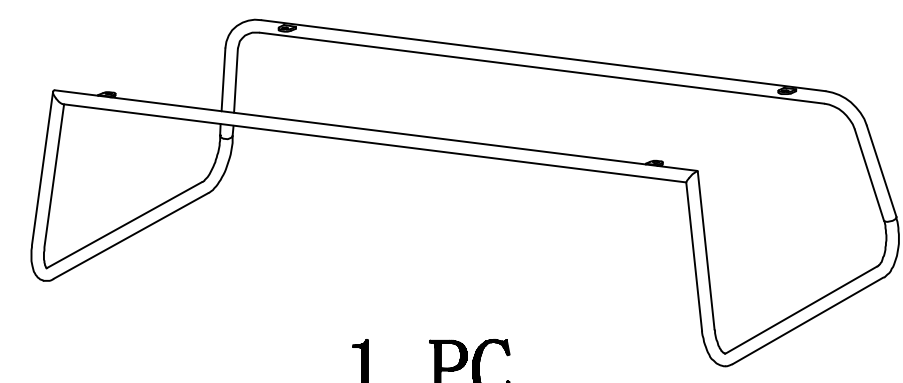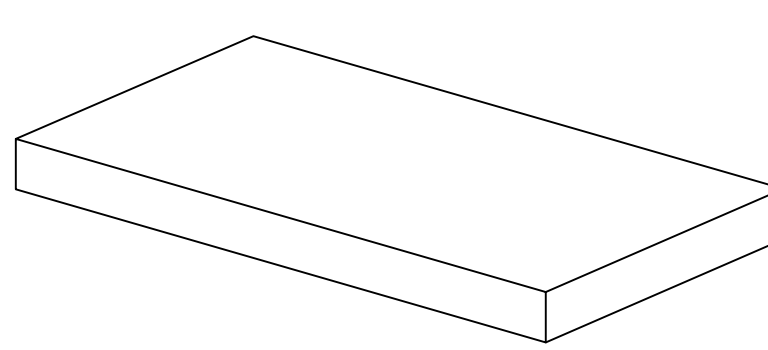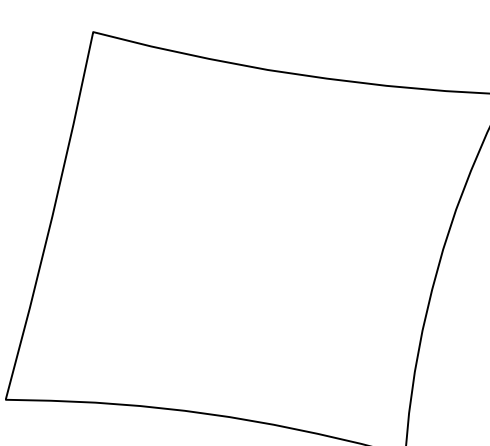①  Bolt M6*15mm 4 PCS	②  Washer 4 PCS	③  Allen Key 1 PC	
A  1 PC	B  1 PC	C  1 PC	D  2 PCS

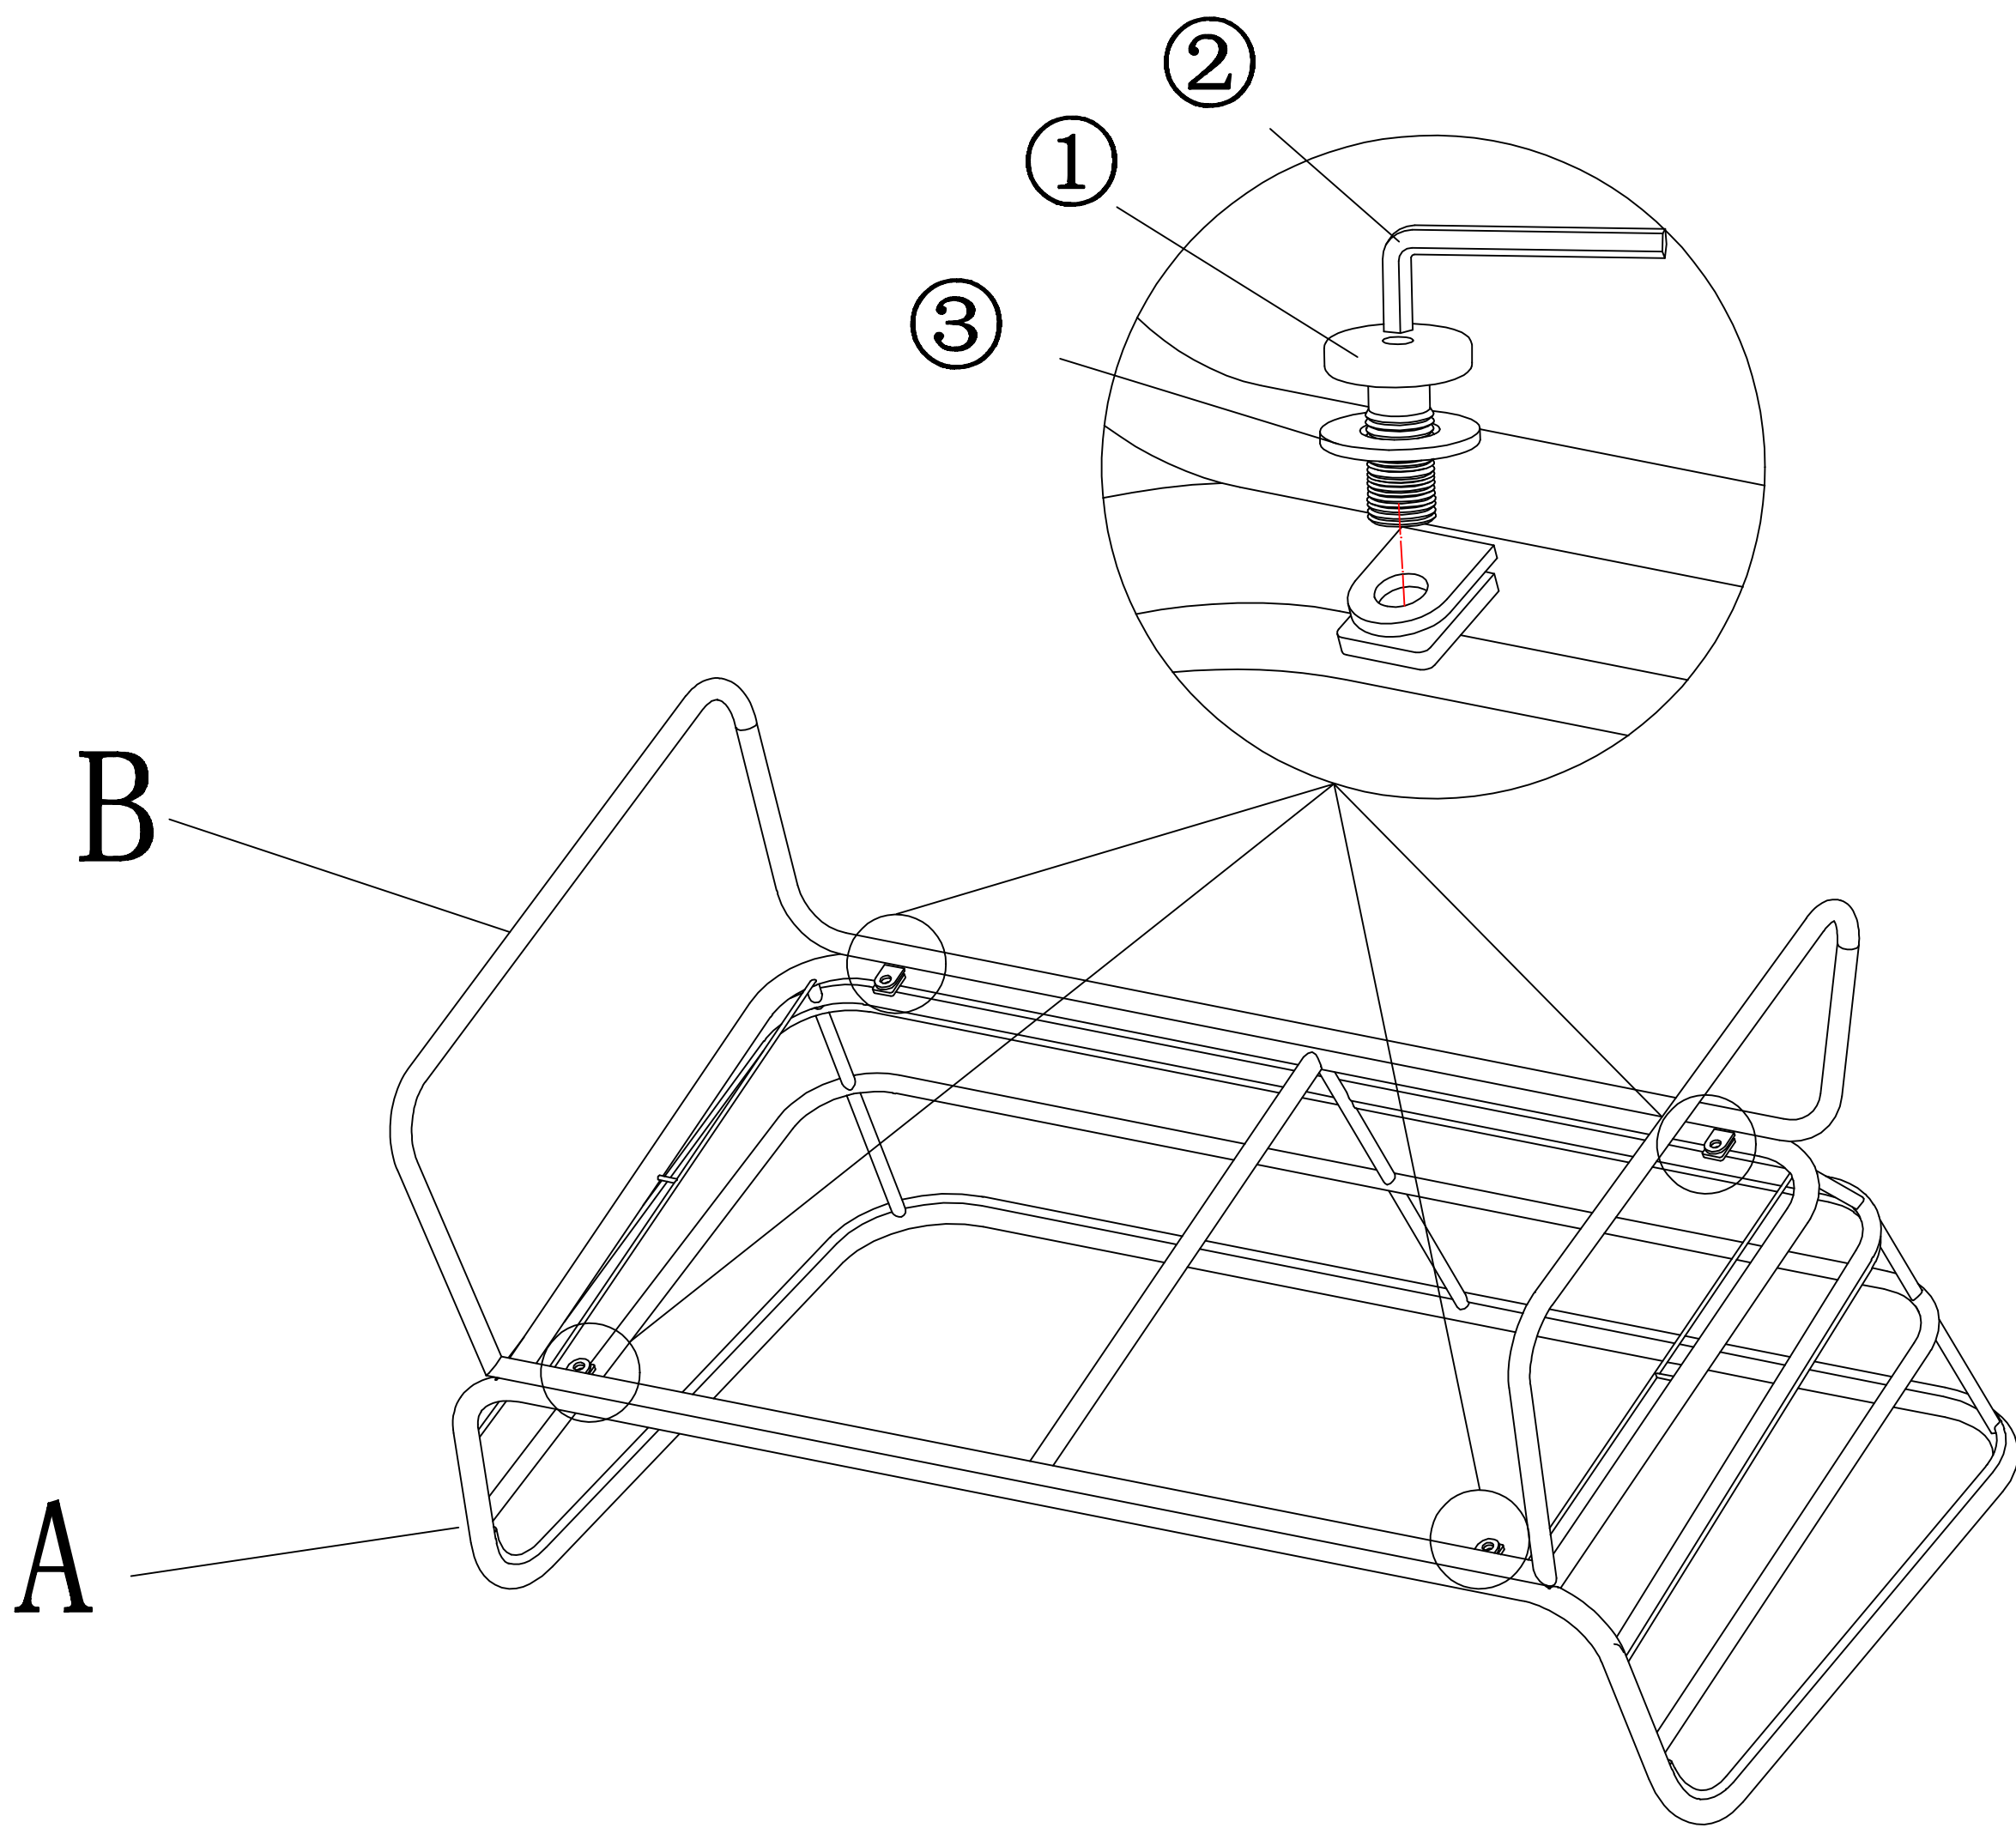Step1:



Step2:

